



Firmware Update Instructions for the Intermatic ET90000 Series

Before starting the firmware update process, download the latest firmware file from www.intermatic.com and save it to a USB memory stick. The USB memory stick must be formatted using the FAT32 File System and Allocation Unit Size must be set to 16K.

The firmware file must be saved in the root folder of the USB memory stick (do not place in a folder). It is recommended that only the required upgrade files be on the USB memory stick.

NOTE: It is **highly recommended** to save a backup of the current schedule on the USB memory stick prior to updating the firmware.

1. From Status screen, press **ENTER**.
2. Press down arrow to scroll to **ADVANCED OPTIONS** and then press **ENTER**.
3. Press left arrow to advance to **SYSTEM CONFIG** screen.
4. Press down arrow to scroll to **FIRMWARE UPDATE** and then press **ENTER**.
5. When an insert a USB stick message appears, insert your USB stick into the timer. The **Select Program** screen appears.
6. Press down arrow to scroll to the desired firmware file (*.FWF).FWF and press **ENTER**. A Firmware Update in Progress message briefly appears indicating firmware is loading.
7. When an OK to remove USB message appears, remove USB stick.

The timer advances to Status screen.

NOTE: If the timer advances to the **INITIAL SETUP/ADVANCED OPTIONS** screen, press **ESC** to advance to Status screen.